


# LEGACY SETUP



## 1 Connect wires of all back and seat pieces together


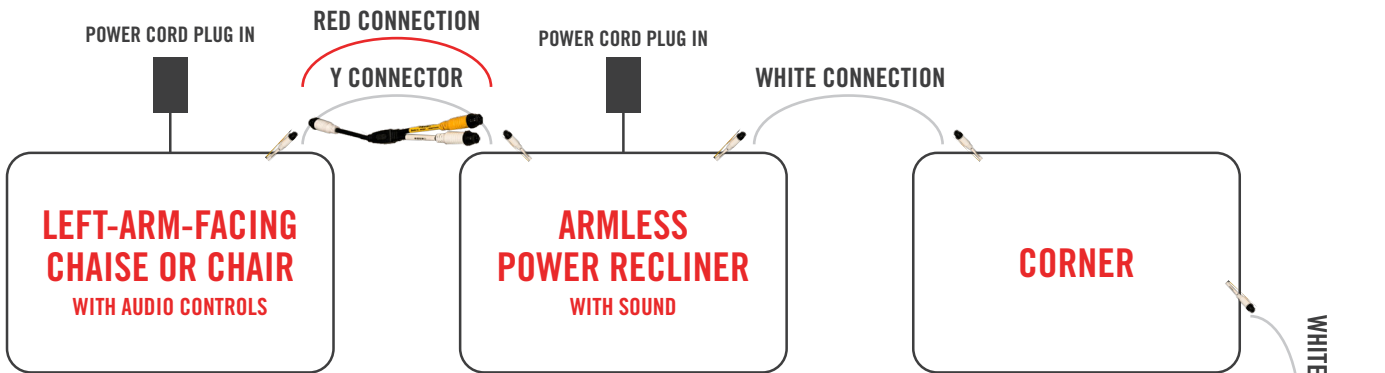


Armless drop down table only has yellow cables  
Chaise does not have yellow cable

## 2 Linking all sectional pieces together

See connection diagram.

If an armless non-reclining chair or a console is added in between 2 audio seats, the red and white wire need to connect to the 2 audio seats on either side.

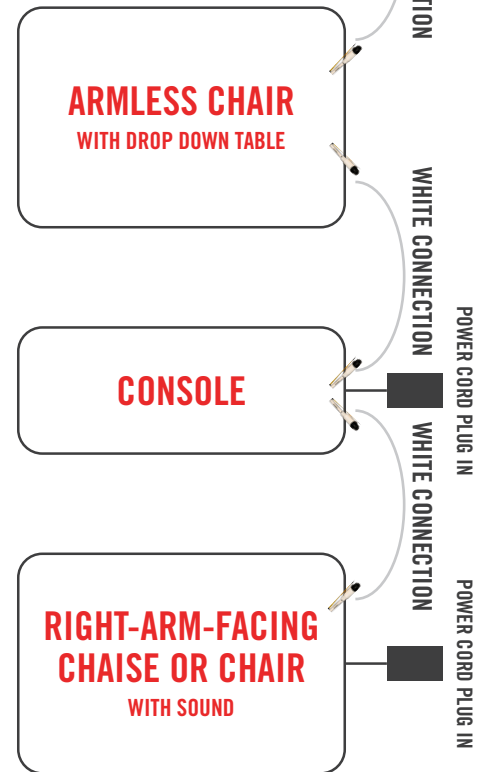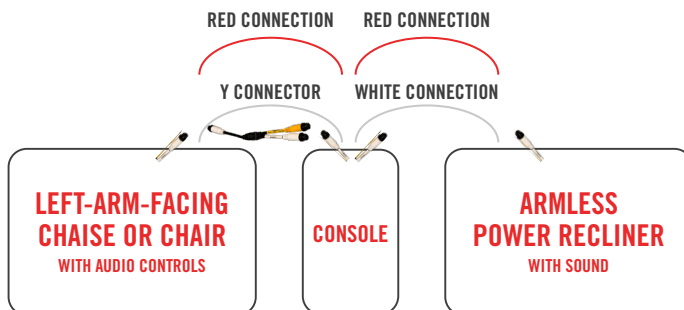

# 3 Syncing all audio seats together

Turn on the control panel by pressing and holding **VOLUME** button.

Press and hold the **BASS** button until you hear an audible tone. Your seats are now synced.

Connect to a bluetooth device by pressing the **VIBRATION** button until you hear “bluetooth” from your system. Find **Immersive Audio** on the bluetooth device and connect.

## NOTES

Any excess loose cables do not need to be connected. They can be tucked away under the seat.

Maximum of 2 pieces with sound per side.

### **Power headrest with manual ratchet surround:**

Due to use of thick, premium foam and fabric on this group, the manual ratchet surround headrest needs to be fully opened and then fully closed (pulled back) to then be reset to the original position.

Red and white cables are only both used when connecting 2 audio seats together.





## 3 Synchronisation de tous les sièges avec son entre eux

Allumez le panneau de commande en appuyant sur le bouton **VOLUME** et en le maintenant enfoncé.

Maintenez le bouton **BASS** enfoncé jusqu'à ce que vous entendiez un signal sonore. Vos sièges sont désormais synchronisés.

Connectez-vous à un appareil Bluetooth en appuyant sur le bouton **VIBRATION** jusqu'à ce que votre système annonce « Bluetooth ». Recherchez « **Immersive Audio** » (son immersif) sur l'appareil Bluetooth et connectez-vous.

### REMARQUES

Il n'est pas nécessaire de connecter les câbles en surplus. Vous pouvez les ranger sous l'assise.

Maximum de 2 meubles avec son par côté.

#### **Appuie-tête électrique avec mécanisme à cliquet**

**manuel** : En raison de l'utilisation de mousse épaisse de qualité supérieure et de tissu dans les meubles de cette collection, l'appuie-tête à cliquet manuel doit être entièrement ouvert puis complètement refermé (tiré vers l'arrière) afin d'être réinitialisé à sa position initiale.

Les câbles rouge et blanc sont utilisés ensemble uniquement lors de la connexion de 2 sièges avec son.

